Galitec Mess- und Regeltechnik GmbH

D-71145 Bondorf · Germany Tel. +49 (0)7457-9453-0 · Fax +49 (0)7457-3758 E-Mail: sensoren@galltec.de · Internet:www.galltec.de

MELA Sensortechnik GmbH

D-07987 Mohlsdorf (Thüringen) · Germany Tel. +49(0)3661-62704-0 · Fax +49(0)3661-62704-20 E-mail:mela@melasensor.de · Internet: www.melasensor.





Humidity Sensor type FK120J (capacitive)

with current or voltage output, to determine air humidity in room version.

Humidity-temperature Sensor type

TFK120J (capacitive)

with current or voltage output, to determine air humidity and temperature in room version.

FK120J for humidity TFK120J for humidity and temperature

Technical Data

measuring range humidity	0100%rh
working range	1095%rh
measuring accuracy	
measuring mediumair, pressurel	ess, non-corrosive/condence
temperature coefficient 0.05	
adjustment at averag	
half-life period (v=2m/sec)	
output humidity 020mA	
	420mA 2- wire system
measuring range temperature	\
0+50°C, -1090°C¹	
measuring accuracy	
working range	
output temperature 020mA	
	420mA 2 wire-system
linearity tolerance	<0.5%
operating voltage max. load for current output	
min. ballast resistance for voltage-or	
internal consumption per measuring	
permissible ambient temperature	
permissible air speed	
fixingslots in housin	
mounting position preferably v	
	ngles to wind direction
contact connecting	
connecting terminals	•
for conductor	r cross-sections 1.5mm ²
cable connection	simple shielding
EMC tested to El	
housingimpact re	esistant plastic, light grey
dimensions	115x70x43mm
protective system	
weight	ca0.2kg
"subject to technical modifications	S"

Description of the sensors

The FK120J (humidity only) / TFK120J (humidity and temperature) sensor measures the air humidity by means of a humidity-dependant condenser. The capacitive humidity measuring element, produced using thin-film technology, consists of a base plate, on which the electrodes are housed, and a hygroscopic polymer layer above it. The hygroscopic polymer layer absorbs water molecules from the medium to be measured (air) or releases them, thereby altering the capacity of the condenser. In a tandem-arranged electronic device, the change in capacity is processed via integrated signal preprocessing into standardised signals 0...20mA or 0...10VDC or 4...20mA.

The measuring element is protected in the housing. The sensors are designed for pressureless systems - the measuring medium is non-corrosive air.

The TFK120J sensors also contain a Pt100 resistance for simultaneous temperature measurement. Its measured values are likewise converted into stan-dardised signals **0...20mA** or **0...10VDC** or **4...20mA**.

Maintenance

The measuring element is maintenance free when the surrounding air is clean. Agents that are corrosive and contain solvents, depending upon the type and concentration of the agent, can result in faulty measurements and cause the measuring element to break down. Substances deposited on the sensor are damaging as they form a water-repellent film. Such substances are resin aerosols, lacquer aerosols, smoke deposits etc.

ATTENTION: The guarantee is no longer valid of the interior of the measuring element has been accessed.


1) please heed working range

This information is based on current knowledge and is intended to provide details of our products and their possible applications. It does not, therefore, act as a guarantee of specific properties of the products described or of their suitability for a particular application. It is our experience that the equipment may be used across a broad spectrum of applications under the most varied conditions and loads. We cannot appraise every individual case. Purchasers and/or users are responsible for checking the equipment for suitability for any particular application. Any existing industrial rights of protection must be observed. The perfect quality of our products is guaranteed under our General Conditions of Sale. Issue: December 2001 valid until 31.12.2006 FK120J_E. Subject to modifications, current version available at www.galltec.de. This issue supersedes all previous technical leaflets.


0100%rh	010VDC			24VAC		59014700 59014800
U 100 70111	42011IA			1524400	ZWIIE	39014600
0100%rh	020mA	0+50°C	020mA	1524VDC	3/4wire	59523030
0100%rh	010VDC	0+50°C	010VDC	1524 VDC 24VAC/DC	3/4wire	59524747
0100%rh	420mA	0+50°C	420mA	1524VDC	2wire	59524848
0100%rh	420mA	-30+60°C	420mA	1524VDC	2wire	59574848
0100%rh 0100%rh 0100%rh 0100%rh	020mA 020mA 020mA 020mA	0+50°C -30+60°C -10+90°C* 0100°C*	020mA 020mA 020mA 020mA	24VAC 24VAC 24VAC 24VAC	4wire 4wire 4wire 4wire	59524242 59574242 59624242 59544242
	0100%rh 0100%rh 0100%rh 0100%rh 0100%rh 0100%rh 0100%rh	0100%rh 420mA 0100%rh 020mA 0100%rh 010VDC 0100%rh 420mA 0100%rh 420mA 0100%rh 020mA 0100%rh 020mA 0100%rh 020mA 0100%rh 020mA	0100%rh 420mA 0100%rh 020mA 0+50°C 0100%rh 010VDC 0+50°C 0100%rh 420mA 0+50°C 0100%rh 420mA -30+60°C 0100%rh 020mA -30+50°C 0100%rh 020mA -30+60°C 0100%rh 020mA -30+60°C 0100%rh 020mA -10+90°C*	0100%rh 420mA 0100%rh 020mA 0+50°C 020mA 0100%rh 010VDC 0+50°C 010VDC 0100%rh 420mA 0+50°C 420mA 0100%rh 420mA -30+60°C 420mA 0100%rh 020mA 0+50°C 020mA 0100%rh 020mA -30+60°C 020mA 0100%rh 020mA -10+90°C* 020mA	0100%rh 420mA 24VAC 1524VDC 0100%rh 020mA 0+50°C 020mA 1524VDC 0100%rh 010VDC 0+50°C 010VDC 1524 VDC 24VAC/DC 0100%rh 420mA 0+50°C 420mA 1524VDC 0100%rh 420mA -30+60°C 420mA 1524VDC 0100%rh 020mA 0+50°C 020mA 24VAC 0100%rh 020mA -30+60°C 020mA 24VAC 0100%rh 020mA -10+90°C* 020mA 24VAC	0100%rh 420mA 24VAC 1524VDC 2wire 0100%rh 020mA 0+50°C 020mA 1524VDC 3/4wire 0100%rh 010VDC 0+50°C 010VDC 1524 VDC 24VAC/DC 24VAC/DC 24VAC/DC 24VAC/DC 24VAC/DC 24VAC/DC 24VAC/DC 24VAC/DC 24VAC/DC 24VAC 24VAC 24VAC 24VAC 24VAC 25 0100%rh 420mA -30+60°C 420mA 1524VDC 2wire 0100%rh 020mA -30+60°C 020mA 24VAC 4wire 0100%rh 020mA -10+90°C* 020mA 24VAC 4wire

^{*} observe max. temperature range

Connection diagram

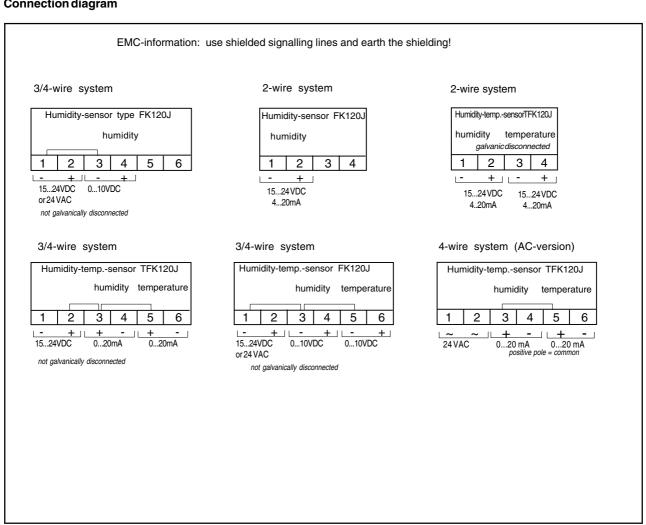

Dimensions diagram

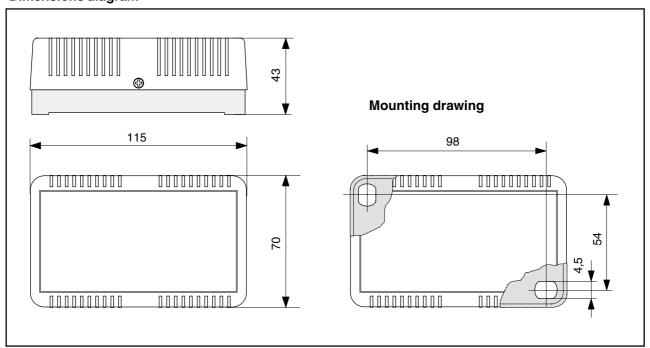

Mounting instructions

The room sensor should be mounted on a vertical wall about 1.5m above the floor.

Do not fit above radiators, near windows or doors, on areas exposed to intense vibration or direct sunlight, exterior walls or chimneys. Under no circumstances must the sensors be mounted into a wall or niche. The sensors should be protected from dripping water or splashes. Ensure that no air can flow into the interior of the housing via the concealed cable lead. Do not use a silicon sealing compound to seal the cable lead.

The sensors should be mounted such that air in the room can flow upwards unimpeded through the ventilation slots in the housing cover.

The temperature coefficient as well as the self-heating of the electronic may vary according to the location and the application (especially with sensors where electronic and measureing system are integrated in one housing.

Guide to installation

Interference is often to be encountered during installation. The correct installation procedure can prevent interference to a very large extent. However, some ground rules should be observed.

To avoid interference, suppression should be carried out in accordance with VDE 0875 and VDE 0874

(VDE - this is assumed to be the Vorschriftenwerk Deutscher Elektrotechniker - regulations governing German electrical engineers).

Fundamentally, interference must be removed at its source, where suppressor material is most effective. Interference can, however, also result from electromagnetic fields via signalling lines. The EMV law determines the corresponding protective measures. All Galltec equipment is designed in accordance with European standards EN 50081-2 and EN 50082-2 (for industrial locations). In addition, further protective measures must be observed.

Unavoidable sources of interference should be kept at a good distance from the control systems.

Data and signalling lines should not be used in parallel with control, networking and power lines.

For data and signalling lines, shielded cable should be used, and the shielding must be applied to the earth terminal. Ensure that earth circuits and fault currents do not arise as a result of a second earth connection.

For equipment with a network connection, it is recommended that a separate network circuit be used.

During the switch process, electrical power consumers such as switch contactors, magnetic valves etc. produce induction voltages that can cause interference. In the trade there is an abundance of protective and suppressor component parts that are most effective when applied directly to the source of the trouble. A suitable suppressor has the added advantage that components such as relays, microswitches etc. have a longer service life.

Further difficulties during installation can arise if signalling lines are joined together with common lines. It is essential to check whether this is permissible. Interference is particularly likely when installing using equipment of different makes. Here, too, the trade offers isolating amplifiers that overcome the problem.