

User mode

User manual of DT100 Room thermostats

1. confirm set temperature

- Press "▲" or "▼" key one then set temperature displays for 3 seconds.

2. Setting temperature

- ① Use Dial turn "+" or "-" for increase or decrease in step of 0.5°C
Only in run status (Not for "OUT" mode)

3. OUT function set

- ① Press key of "heating/out" for 0.5 sec then you will see "out"
Then thermostat sets at preset temperature (factory set is 16°C - this can be adjusted)
For Model of DT100-F,P for cooling the system stops in "out" period.
- ② Pressing "heating/out" key for 0.5sec again the system returns to normal set mode.

4. Timer control of heating and cooling

- ① "heating/out" key and "▼" key at the same time for 1 sec then you will see "00" and a clock icon (🕒) will show up.
- ② this will be the time of valve open in one hour and the time can be set up to 30 minutes in 5 min. step by using "▲" "▼" key. This function is intermittent valve operation 5 min step up to 30 min. The time of "00" means function released.
- ③ Wait 5 seconds after setting or press "heating/out" key the setting will be finished.
- ④ After the setting finished the clock icon (🕒) will be flashed 2 sec on 1 sec off until the time is off.

5. Reserve timer

This function is that after preset time up to 24 hours the thermostat will be back to normal setting.

- ① Press "heating/out" key and "▲" for 1 sec the display shows "00h"
- ② Then use "▲" or "▼" to set stop time of the valve or boilers.
- ③ Wait 5 seconds after setting or press "heating/out" key the setting will be finished.

Installers mode

1. Settin parameters

Normally you do not needd to change any setting.

- ① Press "▲" and "▼" simaltaneously to open the mode and you can move to next setting by pressing "heating/out" key.
- ② "E15" : Temp of "out" mode factory set is 15°C can be altered.
For model of DT100-F factory set is " E--" for cooling
For model of DT100-P no setting display.
- ③ "0.0 °C " temperature display offset can be adusted 0.5°C in the range of ±4°C
- ④ "d00" for heating and cooling system the output delay time to protect compressors eliminating frequent on/off. only apply to model DT100-R, F
- ⑤ Wait 5 seconds after setting or press "heating/out" key the setting will be finished.

2. Heating and cooling (DT100-F,P Model)

switch for heating or cooling on the left side of case.

3. Fan on/off (DT100-P Model)

select Fan switch on/off